 


SEFFI Dryer User Manual

*(SEFFI Pro Compact, Combi, Team
SEFFI Soft Compact, Combi, Team)*

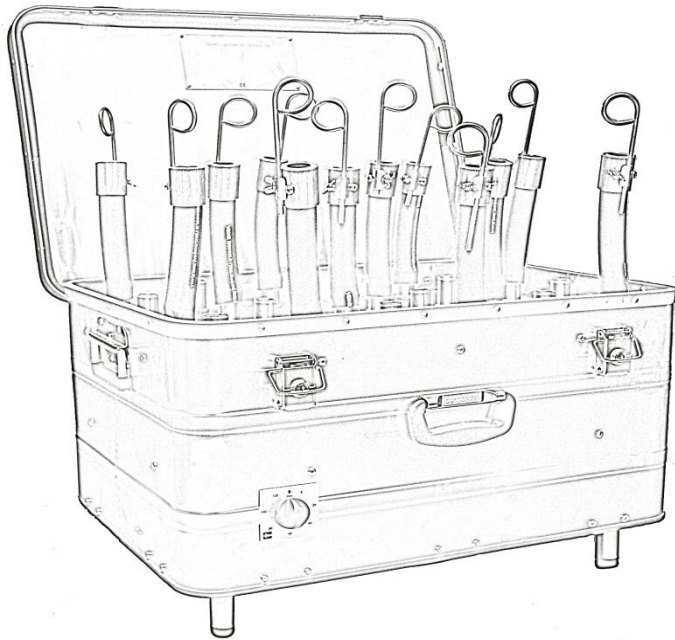

For hand and footwear



SEFFI Dryer

This is a user manual for the following models: SEFFI Pro Compact, Combi, and Team

Please read the instructions carefully before turning on the device.

WARNING

- Read the manual and the safety instructions before using the device, and follow them carefully.
- Do not use the device if any part is damaged or missing.
- Make sure the dryer does not come into direct contact with any liquids.

SAFETY INSTRUCTIONS

1. Make sure that you plug the dryer only into an earthed socket, and that the fuse is a minimum of 10 amps.
2. Before you start using the dryer, make sure that the pipes are in place and that the device is in an upright position. Failure to do so may result in the lid unexpectedly slamming down on a user's fingers. (Image 1)

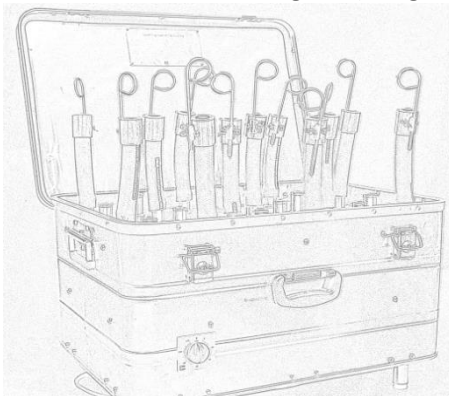


Image 1 (SEFFI 2000)

3. The dryer must only be used in the correct position: standing on its legs. DO NOT PUT ANYTHING AT THE BOTTOM OF THE DRYER TO ENSURE THAT AIR CAN CIRCULATE FREELY AROUND IT.
4. Unplug the device before cleaning and servicing.
5. The device must not be flush mounted as it may overheat if air does not circulate around it.
6. The dryer must not be used in a wet room, or in a room with flammable liquids or gases.
7. If an extension lead is needed, it must be as short as possible and entirely unwound.
8. Avoid connecting the dryer in the same electrical circuit as other electrical devices
9. Do not use the dryer if the power cord is damaged or if it is visibly fractured. If the power cord gets damaged it can only be changed by the manufacturer, retailer or an authorised service technician.
10. The dryer must not be used near a bath, shower or swimming pool.
11. People with limited motor or psychological skills, or those without sufficient knowledge or experience and/or awareness of these safety instructions, are not allowed to use the dryer.
12. Do not let children play with the device.
13. This dryer is meant solely for drying equipment worn on the hands and feet. Any other use is prohibited.





Image 2 (SEFFI Team)

14. Do not poke any items through the holes or the grid of the device.
15. Do not use the device outdoors.
16. Do not use the device if any of its parts are damaged or missing.
17. Make sure that the power out of the socket matches the information given on the type plate of the device.

DIRECTIONS FOR USE

1. Fit the pipes on the device slightly diagonally (image 3)

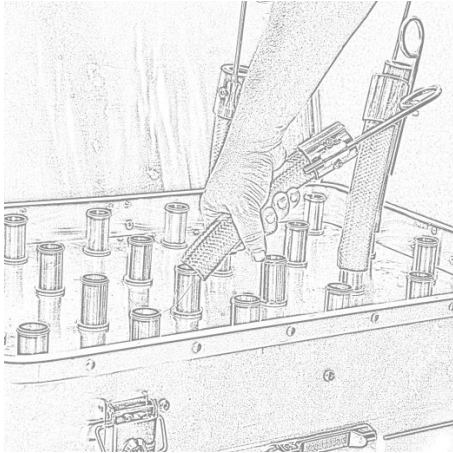


Image 3 (SEFFI Team)

2. Plug the dryer into an earthed socket with a voltage of 220–230 volts. Make sure that the device stands freely on a smooth and solid surface.

3. The dryer is switched on by turning the switch to the desired amount of time. (Image 4)

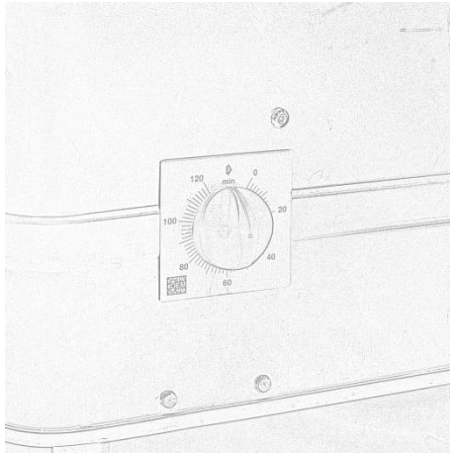


Image 4

4. The dryer switches itself off after the chosen amount of time has elapsed. Allow the device to cool down before closing the lid.
5. If the dryer overheats, its built-in protection mechanism will switch the heating resistor off. The resistor will not heat up again until the dryer has cooled down.

CLEANING

If needed, the inside parts of the device can be cleaned by using light, pressurised air. The case can be wiped with a damp cloth and a few drops of detergent. Never use any other type of liquid to clean the dryer.

Before cleaning the device, make sure that it is unplugged and that its surface is cool.

STORAGE

When the device is not in use, detach the pipes and close the lid (image 5). Only in the Team model can the pipes be fitted under the lid.

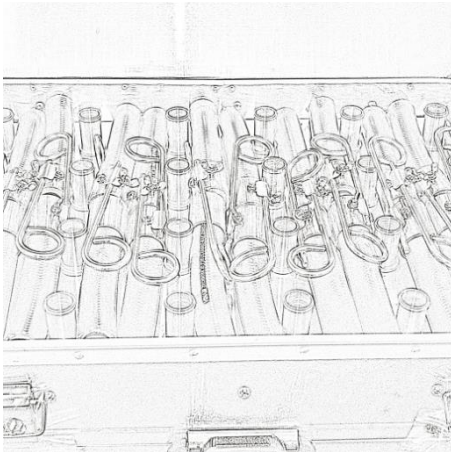


Image 5 (SEFFI Team)

The position of the pipes when stored



Image 7 (SEFFI Team)

Roll the power cord around the legs and secure with velcro. (Image 7)

DO NOT SIT ON THE DEVICE OR PLACE ANY EXTRA WEIGHT ON IT.

ELECTRIC AND ELECTRONIC WASTE

All used electrical and electronic equipment, including batteries, must be recycled.

(In accordance with the Directives 2002/96/EU and 91/157/EEC)

TECHNICAL DETAILS

Supply voltage:		230 V
Frequency:		50–60 Hz
Power:	SEFFI Team	2060 W
	SEFFI Combi	1800 W
	SEFFI Compact	1800 W
Dimensions:	SEFFI Team	670x500x440mm
	SEFFI Combi	580x380x350mm
	SEFFI Compact	430x330x350mm
Weight: (case/pipes)		
	SEFFI Team	24Kg (15Kg / 9Kg)
	SEFFI Combi	19Kg (12Kg / 7Kg)
	SEFFI Compact	15Kg (10Kg / 5Kg)
Fuse:		Minimum 10 A
Power cord:		3,0 meters
Plug:		Earthed. 230 V
Protection class:		IP24
Case:		Aluminium
Air flow:		47 m ³ /min
Noise level:		65dB (A)

GUARANTEE

The product has a one-year guarantee from the day of purchase.

SERVICE

Service only via Sport Equipment Finland Oy.



EU Declaration of Conformity

WE

**Sport Equipment Finland Oy
Kalliokatu 13
40630 JYVÄSKYLÄ
FINLAND**

declare under our sole responsibility that the following product

Equipment: **Dryer**
Brand: **SEFFI**
Model/type: **SEFFI Team, SEFFI Combi, SEFFI Compact Dryer for hand and footwear**

is in conformity with the

- Low Voltage Directive (LVD) 2006/95/EC,
- Electromagnetic Compatibility Directive (EMC) 2004/108/EC,
- Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU

and the following harmonised standards and technical specifications have been applied:


EN 50525-2-31	EN 60335-1:2002+A1+A11+A12+A2+A13+A14
EN 60947-7-1:2009	EN 60664-1
EN 60335-2-80:2003 +A1+A2	EN 50022
IEC 60884-1:2002+A1	
IEC 5610:2004+A1:2008	

EN 55014-1:2006 + A1:2009 +A2:2011
EN 55014-2:1997 + A1:2001 + A2:2008
EN 61000-3-2:2006+A1
EN 61000-3-3:2008
EN 61000-6-2
EN 60027
EN 62233:2008

The last two digits of the year in which the CE marking was affixed: 14

In Jyväskylä, 16th of April, 2014

Sport Equipment Finland Oy


Janne Rummakko, Managing Director

CE

CONTACT DETAILS

Sport Equipment Finland Oy
Kalliokatu 13
FI-40630 Jyväskylä
Finland
Tel. +358 50 4428282
Homepage: www.sef.fi
E-mail. info@sef.fi

